


INSTALLATION GUIDE



STEP 1

Position the panel on the floor. Apply a center hinge using tape. Avoid aligning the edges of the graphic on the grout lines of tile.

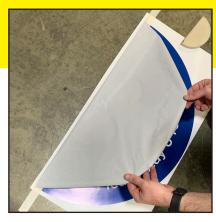

STEP 2

Fold back one end of the graphic. Peel graphic from the liner. Trim off the top half of the liner.



STEP 3

Starting by the tape, squeegee from the middle to one edge of the graphic. Then squeegee from the middle to the other edge. Using a slightly overlapping pattern continue to the end of the graphic.



STEP 4

Fold back the other half of the graphic and remove its liner.



STEP 5

Squeegee the other half of the graphic down using the same squeegee pattern.



STEP 6

Remove the tape. Your installation is now finished.